

Railing Planter





Materials You Will Need

(Measurements are given for total running feet required)


- ◆ 10' of ProWood® Pressure Treated 1 x 8
- ◆ One Box Of 1-1/2" #6 Galvanized General Purpose Screws

Tools

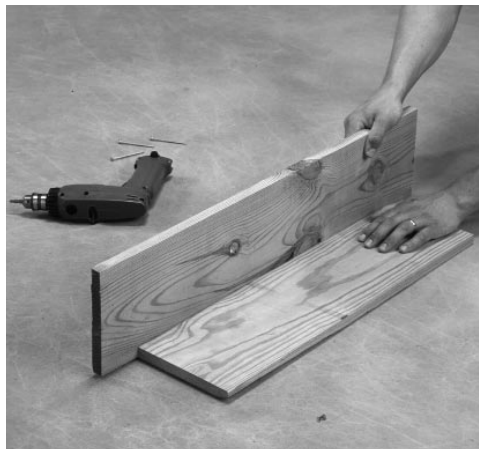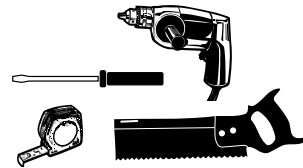

1. ATTACH THE BOTTOM AND FRONT PIECES

Center the bottom piece along the bottom edge of the front piece as shown and attach with screws.

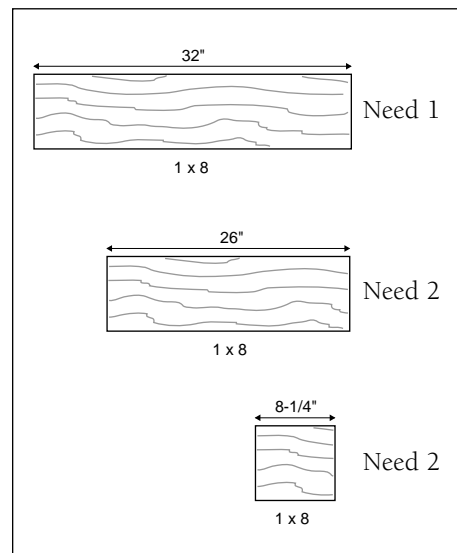



2. ATTACH THE BACK PIECE

Place the back piece on the edge of the bottom piece as shown and attach with screws.



3. PUT ON THE SIDES

Place the side pieces behind the front piece and against the edge of the bottom and back pieces and attach with screws. Use bike hooks or other hardware hooks to hang your planter from your railing.

Note: Always wear gloves, a dust mask, and eye protection when sawing, sanding, or machining wood. Pre-drilling will make embedding screws easier.

© 1998 Universal Forest Products,® Inc.
IB5708-5/98

The diagrams and instructions in this brochure are for illustrative purposes only, and are not meant to replace a licensed professional. Any construction or use of the product must be in accordance with all local zoning and/or building codes. The consumer assumes all risks and liability associated with the construction or use of this product. The consumer or contractor should take all necessary steps to ensure the safety of everyone involved in the project, including, but not limited to, wearing the appropriate safety equipment. Universal Forest Products, Inc., makes no warranty, either express or implied, and shall not be liable for any damages, including consequential damages.

Do More With Every Project!